

Side Connector Switches



The standard position of the power connector is on the top of the drive head. If this position is not suitable to the end user, AST can position the connector on the side of the driver.